



"U" Style Frame

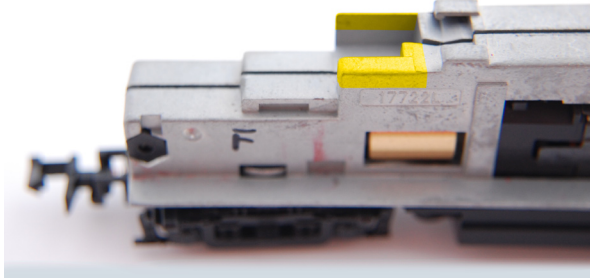

6YZcfY'AcXJÚWWh]cb

5ZhYf'AcXJÚWWh]cb

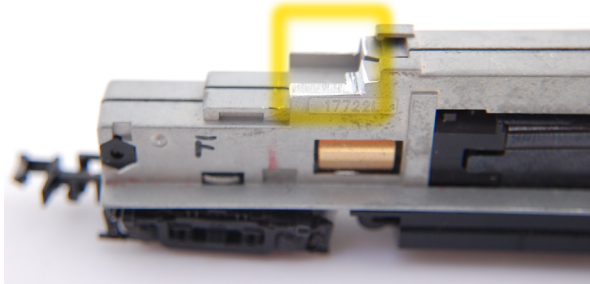

"U" Style, split lighting board locomotive.


The "U" style frame is characterized by the long extensions of metal which rest directly under the decoder on both sides of the front of the decoder. These sections of the frame will prevent the decoder from being installed safely and properly.

To install a decoder in a "U" style frame simply remove the section shown in yellow above from the FRONT SIDE ONLY, (do NOT modify the backside) and make sure it looks like the image above on the right.


Install the CN Decoder in "U" style frames

f5Zhf'AcXJÚWWh]cb YI d'U]bYX'UVcj YŁ

Train Control Systems Classic N Decoders Selection and Installation Guide

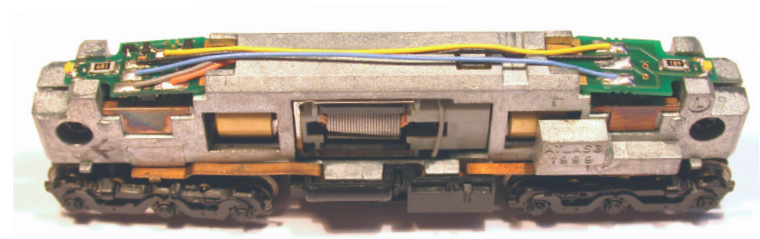

CN CN-GP

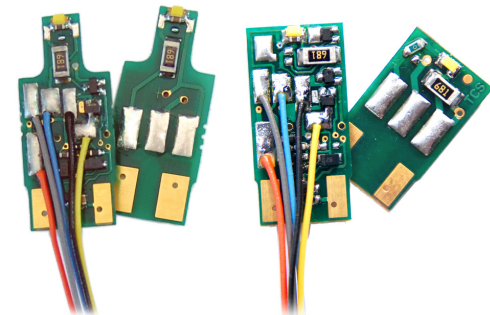

www.tcsdcc.com

**TRAIN CONTROL
SYSTEMS**

215-453-9145

